

EMERGI-LITE®

TEL: (888) 935-3605 FAX: (888) 867-1565

A Division of Thomas & Betts Corporation

FPS80D

UNIVERSAL VOLTAGE

EMERGENCY

LIGHTING EQUIPMENT

INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. **CAUTION** – To prevent electrical shock, do not mate unit connector until installation is complete and A.C. power is supplied to the unit.
2. **CAUTION** – This fixture provides more than one power supply output source. To reduce the risk of electrical shock, disconnect both normal and emergency sources by turning off the A.C. branch circuit and by disconnecting the unit connector.
3. **CAUTION** – This is a sealed unit. The integral, high temperature Ni-Cad battery is not replaceable. Replace the entire unit when necessary and recycle or dispose of the nickel-cadmium battery properly.
4. **DO NOT USE OUTDOORS.** The **FPS80D** is for use with grounded, UL Listed, indoor fixtures. Do not use in heated air outlets or hazardous locations.
5. The **FPS80D** requires an unswitched A.C. power source of 110-277V 50/60Hz.
6. Do not mount near gas or electric heaters.
7. The **FPS80D** should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
8. The **FPS80D** is suitable for mounting in the ballast compartment or on top of the fixture. For top mount, order optional mounting kit TMK-80.
9. The **FPS80D** will cold strike and operate *one* 28W or 54W T5 or 2'-8' or *two* 2'-4' instant start, rapid start, U shape or circline, T8 through T12 fluorescent lamps, including energy saving and long 4 pin compact lamps for 90 minutes.
10. The **FPS80D** is compatible with most A.C. ballasts (including multiple lamp) as follows:
Magnetic ballasts – either one or two lamp emergency operation.
Electronic ballasts – one lamp emergency operation, consult Customer Service for two lamp emergency operation wiring diagrams.
11. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
12. Do not use this equipment for other than intended use.
13. Install in accordance with the National Electrical Code and local regulations.
14. Installation and servicing should be performed by qualified personnel.
15. Lighting fixture manufacturers, electricians and end users need to ensure product system compatibility before final installation.

SAVE THESE INSTRUCTIONS



THIS UNIT CONTAINS A RECHARGEABLE NICKEL-CADMIUM BATTERY. PLEASE RECYCLE OR DISPOSE OF PROPERLY.

Thomas & Betts

INSTALLATION INSTRUCTIONS

CAUTION: Before installing, make certain the A.C. power is off and the FPS80D unit connector is disconnected.

1. LAMPS OPERATED

The FPS80D can be used with most 2'-8' lamps. Refer to the chart below for the type of lamp(s) operated and the number of lamps to be operated in emergency mode.

OPTION	LAMP TYPE	EMERGENCY OPERATION	*VIOLET LEADS	WIRING DIAGRAMS
1	2'-4" T8/T12 Single & Bipin Pin	One Lamp	Connected	1, 2, 3, 4, 5, 6, 7, 8
2	5'-8" T8/T12 Single & Bipin Pin	One Lamp	Disconnected	1, 2, 3, 5, 6
3	2'-4" T8/T12 Single & Bipin Pin	Two Lamp	Disconnected	
4	2'-4" 28W-39W T5	One Lamp	Connected	1, 2, 3, 4, 5, 6, 7, 8
5	2'-4" 54W T5	One Lamp	Disconnected	1, 2, 3, 4, 5, 6, 7, 8
6	18W-55W Long Compact	One Lamp	Disconnected	1, 2, 3, 4, 5, 6, 7, 8

*The 6" violet leads provide the lamp selection option. The unit is shipped from the factory with the leads disconnected and capped. When used with particular lamp types, violet leads should be connected to one another. Refer to chart for lamp selection options.

2. MOUNTING THE FPS80D

Remove the ballast channel cover. Mount the FPS80D in the ballast channel at least 1/2" away from the A.C. ballast(s). The FPS80D may also be mounted on top of the fixture. The optional top mounting kit (Catalog No. TMK-80) may be ordered separately from Customer Service.

When battery packs are remote mounted, the remote distance can not exceed 1/2 of the distance from ballast to lamp specified by the A.C. ballast manufacturer. Under no circumstances should the battery pack exceed a distance of 50' from the lamp.

3. WIRING

Refer to the wiring diagrams on the back page for the appropriate wiring of lamp(s) and ballast. Install in accordance with the National Electrical Code and local regulations. For additional wiring diagrams consult Customer Service.

4. INSTALLING THE LIGHTED PUSH BUTTON TEST SWITCH (LPTS)

Recessed Troffer Fixture – Select a convenient location with proper clearance in the ballast cover and drill or punch a 7/8" hole (1/2" knockout). Insert the 7/8" bushing into the hole. Push the plastic tube through the bushing. Disconnect the leads from the LPTS housing and route the leads down the plastic tube. Reconnect the leads to the housing, observing the proper polarity (Red/Black or Red lead w/connector to positive (+) tab. The positive terminal will be indicated by the red mark on the side of the LPTS switch). Push the entire assembly back into the tube until the lens collar rests against the plastic tube. The plastic tube should be adjusted so that the LPTS is within 1/4" of the fixture lens. The LPTS must be visible after installation. Refer to *Illustration 1*.

Strip Fixture – Select a convenient location on the side of the fixture so the LPTS can be seen after installation. Allow for proper clearance inside the fixture and drill or punch a 1/2" hole. Disconnect the leads from the LPTS housing. Push the LPTS housing into the 1/2" hole until it is firmly locked in place. Reconnect the leads, observing the proper polarity (Red/Black or Red lead w/connector to positive (+) tab. The positive terminal will be indicated by the red mark on the side of the LPTS switch). Refer to *Illustration 2*.

Illustration 1 Recessed Troffer Fixture


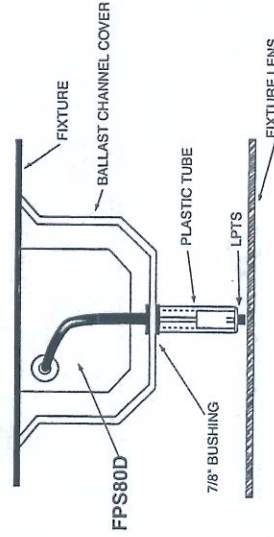


Illustration 2 Strip Fixture

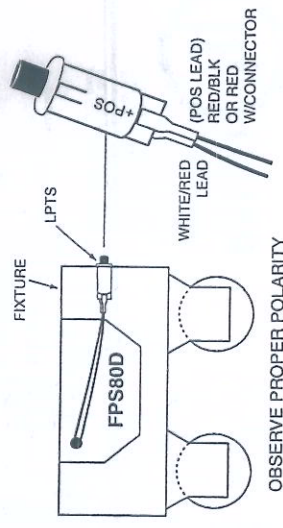


OBSERVE PROPER POLARITY


5. WIRING THE A.C. INPUT

- The FPS80D and A.C. ballast **must** be on the same branch circuit.
- The FPS80D requires an **unswitched** A.C. power source of 110-277V 50/60HZ.
- When the FPS80D is used with a switched fixture, the A.C. input to the FPS80D must be connected ahead of the fixture switch. Refer to *Illustration 3* for switched and unswitched fixture wiring diagrams.

Illustration 3 Switched Fixture

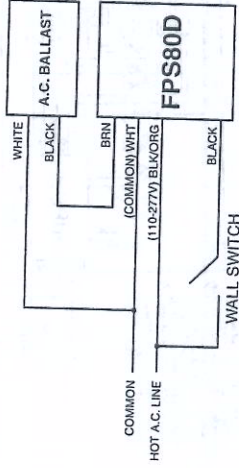

Unswitched Fixture

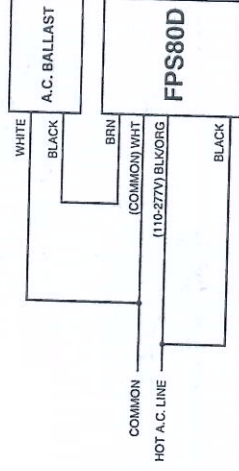

6. LABELS

Attach the appropriate labels adjacent to the LPTS. Annotate Re-lamping label for lamp type and wattage. The Caution and the Re-lamping labels must be on the fixture in a readily visible location to anyone attempting to service the fixture.

7. COMPLETING INSTALLATION

When the installation is complete, switch the A.C. power on and join the FPS80D unit connector.

OPERATION

Normal Mode – A.C. power is present. The A.C. ballast operates the fluorescent lamp(s) as intended. The FPS80D is in the standby charging mode. The LPTS will be lit (green) providing a visual indication that the battery is fully charged or (red) indicating that the battery is currently charging.

Emergency Mode – The A.C. power fails. The FPS80D senses the A.C. power failure and automatically switches to the Emergency Mode. One or two lamps are illuminated, at reduced output, for a minimum of 90 minutes. When the A.C. power is restored, the FPS80D switches the system back to the Normal Mode and resumes battery charging. See page 1 of the Instruction Manual.

TESTING & MAINTENANCE

Pressing and releasing the LPTS initiates a 30-second test by interrupting power to the designated A.C. ballast and causing the unit to run in emergency mode. The designated emergency lamp is now being lit by the FPS80D unit for a 30-second test. After the 30-second test has completed, the fixture returns to normal operation. To simulate a “BLACK OUT” use the circuit breaker to turn off A.C. power to the fixture.

Initial Testing – Allow the unit to charge approximately 1 hour, then conduct a short discharge test. Allow a 72 hour charge before conducting a one hour test.

The FPS80D is designed to automatically conduct both 30-second and 90 minute tests at regular intervals every 26 to 28 days. Automatic Testing is outlined in the following schedule:

Automatic Monthly Testing – The FPS80D will automatically conduct a 30 second test once. If the FPS80D encounters a problem, the LPTS will flash and the internal beeper will sound. See Table below for diagnosis.

Automatic Annual Testing – The FPS80D will automatically conduct a 90 minute test every twelve months. If the FPS80D encounters a problem, the LPTS will flash and the internal beeper will sound. See Table below for diagnosis. To insure accurate testing, the FPS80D will not conduct any scheduled automatic tests for a period of 72 hours after the unit has discharged, regardless of reason, for more than five minutes.

Manual Testing - Manual Testing can be performed on the FPS80D at any time, provided the unit is fully charged, by pressing and releasing the LPTS (see above). Manual Testing will not interfere with the automatic testing schedule of the FPS80D and will display the same diagnosis indicators as automatic testing.


LED IS RED WHEN CHARGING, GREEN WHEN READY			
CHARGE FAILURE	1 BEEP	1 FLASH	FAILURE CODES OCCUR ONCE EVERY 15 SECONDS WITH 1 SECOND DELAY BETWEEN CODES IN INSTANCES OF MULTIPLE FAILURE
BATTERY FAILURE	2 BEEPS	2 FLASHES	
LAMP FAILURE*	3 BEEPS	3 FLASHES	
INVERTER FAILURE*	4 BEEPS	4 FLASHES	
*IF FAILURE, REPLACE LAMP AND RETEST			

SERVICING SHOULD BE PERFORMED BY QUALIFIED PERSONNEL.
Consult Customer Service for current warranty information.


TYPICAL WIRING DIAGRAMS

For wiring diagrams of ballasts not shown, consult our Customer Service.


1. ONE LAMP RAPID START BALLAST

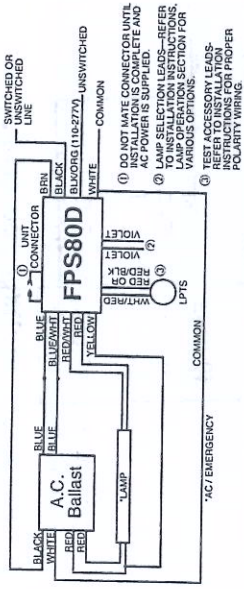


6. FOUR LAMP RAPID START BALLAST

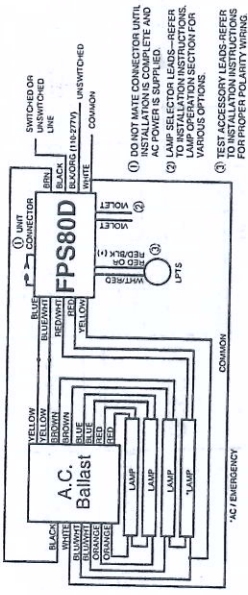


2. TWO LAMP RAPID START BALLAST

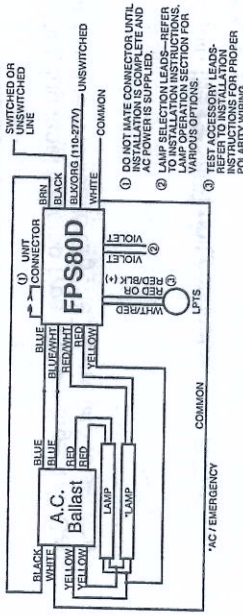


7. ONE LAMP INSTANT START BALLAST

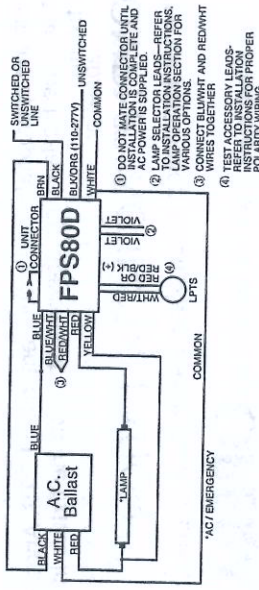


3. TWO LAMP RAPID START BALLAST

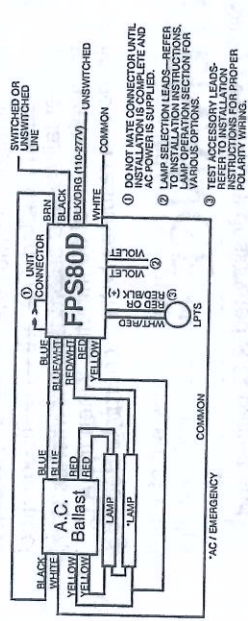


8. TWO LAMP INSTANT START BALLAST

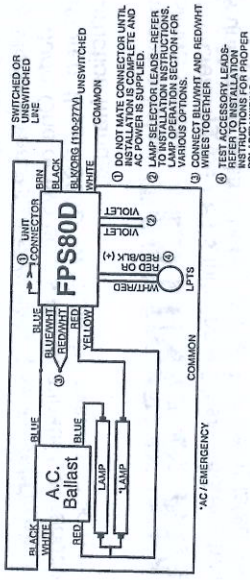


4. THREE LAMP RAPID START BALLAST

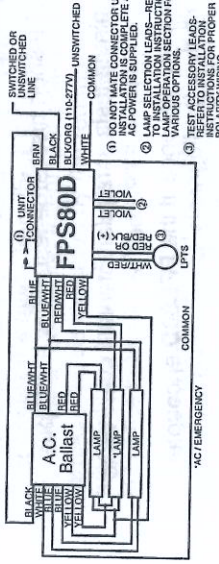

9. THREE LAMP INSTANT START BALLAST

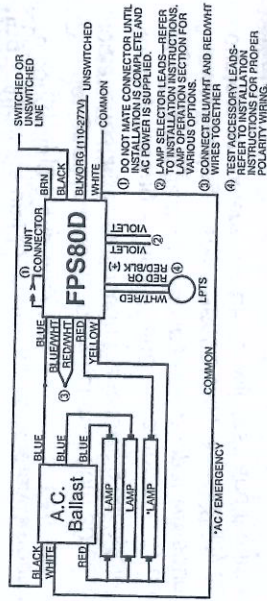

5. THREE LAMP RAPID START BALLAST

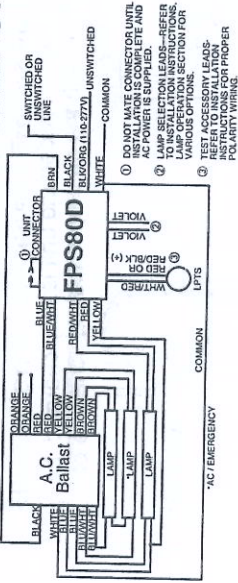

10. FOUR LAMP INSTANT START BALLAST

