




Import the proper Iso-curves into your CAD drawing
IES Photometric files WPLK3 Emergency S1811084-R1
Iso curves in footcandles
unit: feet

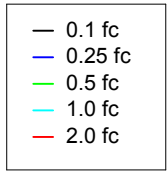


Mounting at 7'

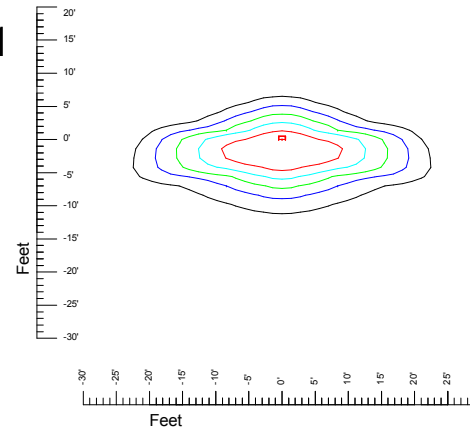


Mounting at 9'

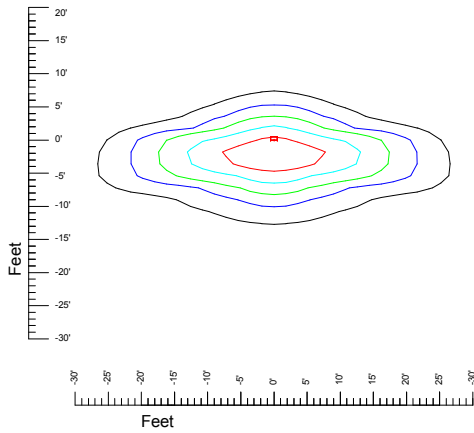


Mounting at 11'

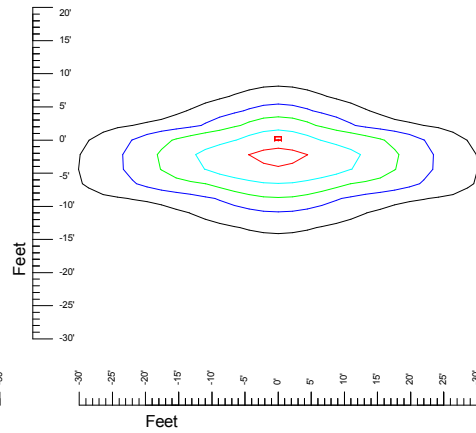


Mounting at 15'

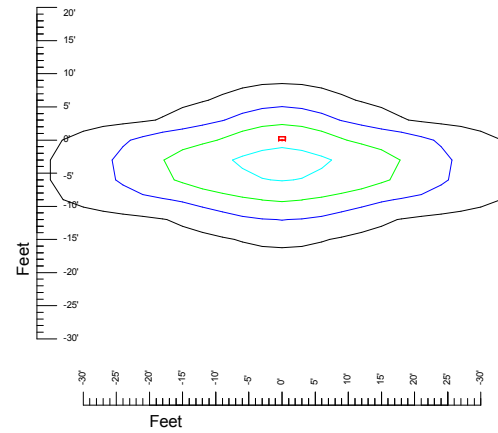

Mounting at 20'

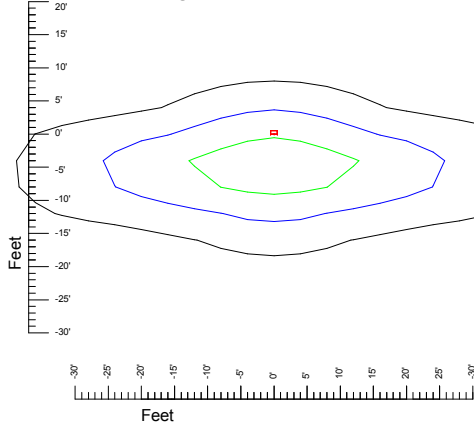

Mounting at 25'

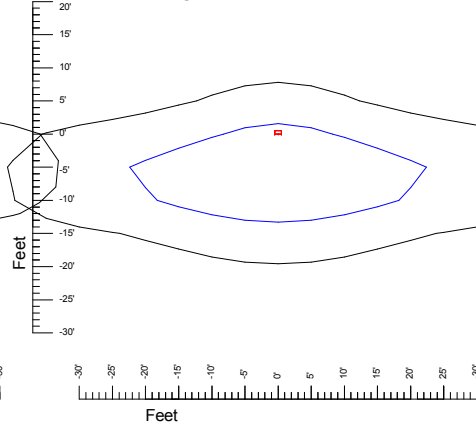

Mounting at 30'

