

# C8SRPK Series

## Water, Dust & Oil Resistant Industrial Units

### IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not let power supply cords touch hot surfaces.
2. Do not mount near gas or electric heaters.
3. Use caution when handling batteries. Avoid possible shorting.
4. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
5. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
6. Caution: If optional Halogen cycle lamp(s), symbol (H—), are used in this equipment, to avoid shattering: do not operate lamp in excess of rated voltage, protect lamp against abrasion and scratches and against liquids when lamp is operating, dispose of lamp with care.
7. Halogen cycle lamps operate at high temperatures. Do not store or place flammable materials near lamp.
8. Do not use this equipment for other than intended use.
9. All servicing should be performed by qualified service personnel.


### SAVE THESE INSTRUCTIONS

#### Installation Instructions

1. Turn off AC power.
2. Route AC circuit wires to electrical box and leave 12" of wire length.
3. Remove the four screws holding the cover on the housing. Open the cover and remove the stencil.
4. Depending on how the unit is to be mounted, follow either the canopy mounting or the wall mounting procedures:

#### Canopy Mount (ceiling and end mount)


1. The unit can be installed with the canopy on the top or the side of the unit. *In both cases, the two "L" brackets should be installed in addition to the canopy in order to provide a more rigid installation. Each "L" bracket is to be installed using a mounting bracket, a plastic spacer, two 10-32 x 3/8" screws and a 10-32 nut (the "L" brackets need to be drilled).*
2. If the unit is to be side mounted, drill an 11/16" dia. hole on either side of the unit, centered around the trapezoidal opening of the cover lens, for the nipple to go through. If the unit is to be ceiling mounted, then drill the 11/16" dia. hole on the top of the housing. *You might wish to reinstall the cover lens temporarily to make sure that there will not be any interference between the nipple and lens cover once attached.*
3. If the unit is double-faced remove one unit and follow the instructions for the mounting configuration desired. Reinstall the secondary unit. To

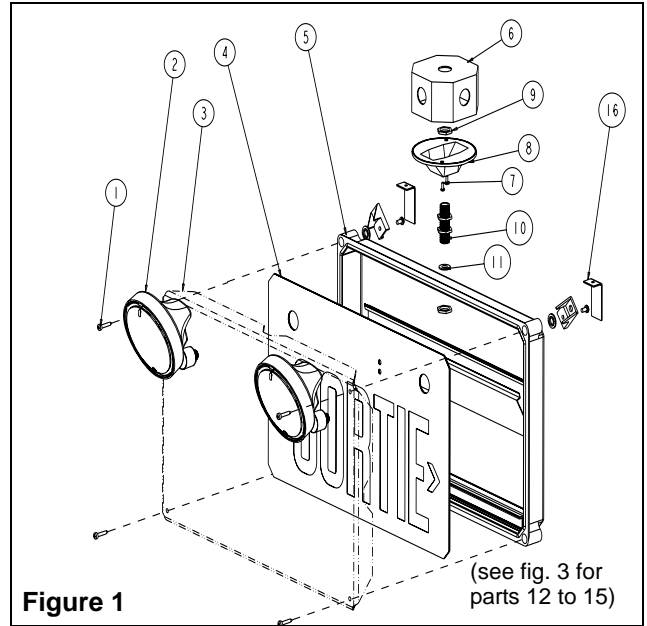

**Figure 1**

#### Parts List

- |                                       |                            |
|---------------------------------------|----------------------------|
| 1. Cover screws #10 (4)               | 9. HEX NUT 1/4IPS (4)      |
| 2. Lamp Heads (combination unit only) | 10. Nipple 1/4IPS x 2"     |
| 3. Cover Lens                         | 11. Foam gasket            |
| 4. Stencil                            | 12. Mounting bracket (4)   |
| 5. Housing                            | 13. Screw 10-32 x 3/8" (4) |
| 6. Junction Box (not supplied)        | 14. Plastic spacer (4)     |
| 7. Canopy Backplate                   | 15. Watertight fitting     |
| 8. Canopy                             | 16. "L" bracket (2)        |

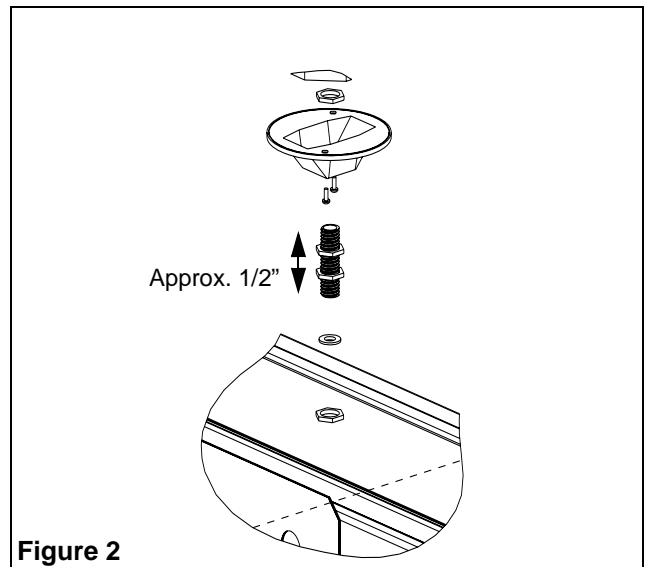

**Figure 2**

pass the AC drill a 3/4" dia. hole for the watertight fitting on the center part of one of the sides of each unit. Make sure that the watertight fitting does not interfere with the cover lens. Use the cable provided to connect the AC power to the second unit.

4. Install the canopy on the nipple using a *Hex-nut* on the top end of the stem and pull the nipple through the center hole of the canopy (see Fig.2). Install another *Hex-nut* from the bottom of the nipple and thread it until it contacts the canopy and tighten the two *Hex-nuts*. Install the third *Hex-nut* onto the nipple and leave about a 1/2" distance between the two *Hex-nuts*. Install the foam gasket and the last *Hex-nut* and tighten the whole assembly.
5. Screw the housing and canopy assembly onto the junction box after having pulled the AC wires, through the nipple, inside the housing.

### Wall Mount

1. Choose the area where the electrical wires are to enter the unit. Drill a 3/4" dia. hole for the watertight fitting on the center part of one of the sides of the housing. Make sure that the watertight fitting does not interfere with the cover lens.
2. Install the four plastic mounting brackets (see Fig.3). Use the plastic spacers between the housing and the bracket and tighten using the provided 10-32 x 3/8" screws.
3. Install the unit using appropriate screws for the type of wall it is to be installed on.
4. Install the watertight fitting and run the AC wires into the cabinet.

### Electrical Connections

*Important: All electrical connections are to be made inside the housing and not inside the junction box or canopy.*

**Self-Powered & AC/DC models** — Make the connections according to fig.

4. The unit accepts AC voltages of 120 to 347V and DC voltages of 6 to 24V.

**Combination unit** — Make the proper connections according to fig.5. The unit accepts AC voltages of 120 or 347V.

1. When ready to energize AC, connect batteries by plugging the battery connector to J2 on the circuit board.
2. Energize AC. Allow unit to charge for 24 hours before initial testing.

### Testing (combination unit & self-powered)

Bring the provided magnetic tester close to the bottom right side of the housing, where indicated with a label, to activate the magnetic switch; emergency lamps will illuminate. Release switch and emergency lamps will extinguish.

### Maintenance

None required. Unit should be tested in accordance with CEC or local codes. This equipment is furnished with a low battery disconnect circuit in the emergency mode. However, if the AC supply to the unit is to be disconnected for 2 months or more, the battery must be disconnected. Do not allow battery wires to short circuit.

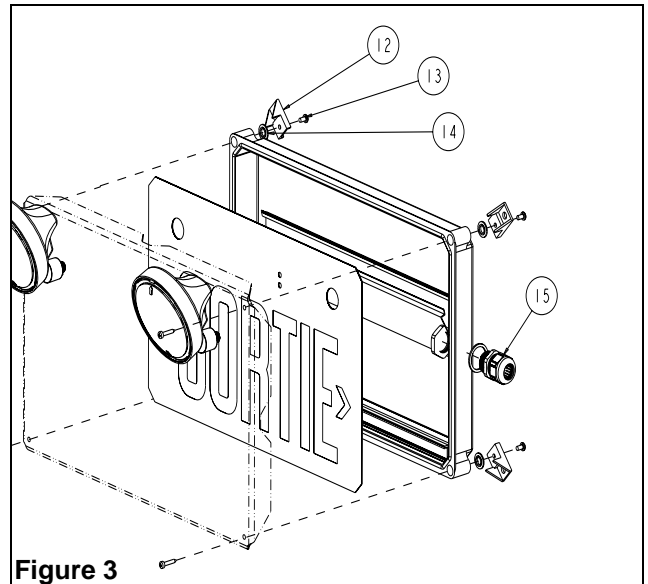


Figure 3

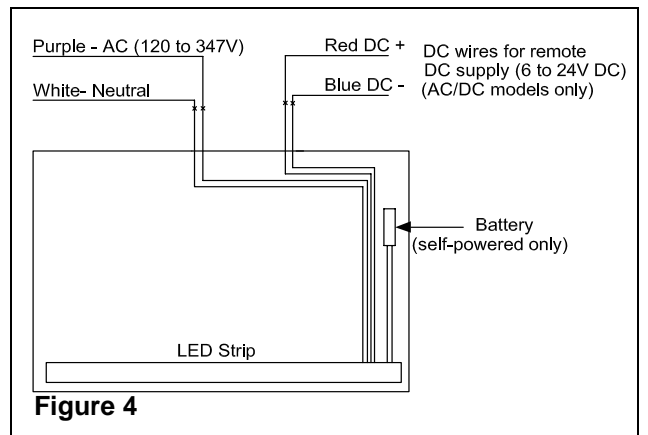


Figure 4

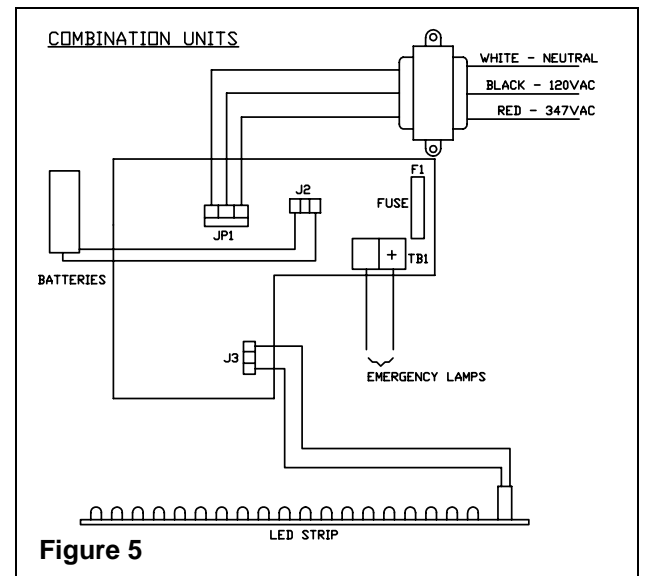


Figure 5